

Service Part List_HT2400_Version A

No.	Product Model#	Part Number	Description	Qty
1	HT2400	5610032004	Tapping Screw	22
2	HT2400	5630007001	Prevailing Torque Hexagon Nut	10
3	HT2400	5650487001	Plain Washer	10
4	HT2400	5650196001	Bush	8
5	HT2400	3704422001	Blade	2
6	HT2400	3704421001	Support Plate	1
7	HT2400	5640184003	Bolt	8
8	HT2400	3124369001	Cover	1
9	HT2400	3420683001	Clamp Support	1
10	HT2400	3124359001	Sheath	1
11	HT2400	4870381001	Trigger Switch	2
12	HT2400	3124356001	Switch Trigger	1
13	HT2400	5620424001	Screw	1
14	HT2400	3124203001	Guard	1
15	HT2400	3704304001	Fixing Block	1
16	HT2400	2820184001	Motor & Gear	1
17	HT2400	3124234001	Gear Case Cover	1
18	HT2400	5650015003	Spring Washer	2
19	HT2400	5620220001	Screw	2
20	HT2400	5650331001	Washer	1
21	HT2400	3520292001	Planet Gear	4
22	HT2400	3520511001	Sun Gear	1
23	HT2400	3520391001	Ring Gear	1
24	HT2400	3705616001	Washer	1
25	HT2400	3520540001	Planet Gear	5
26	HT2400	3520539001	Ring Gear	1
27	HT2400	2824093001	Carrier	1
28	HT2400	5650200001	Washer	1
29	HT2400	5700280001	Oil Impreging Bearing	1
30	HT2400	3124240001	Gear Case	1
31	HT2400	3124267001	Lever	1
32	HT2400	3660076001	Spring	2

No.	Product Model#	Part Number	Description	Qty
33	HT2400	3124357001	Switch Trigger	1
34	HT2400	3127206001	Lever	1
35	HT2400	3660129002	Spring	1
36	HT2400	3402724001	Contact Receptacle ASSY	1
37	HT2400	3660013003	Spring1	1
38	HT2400	3127202001	Power Pack Button	1
39	HT2400	3127201001	Release Button	1
40	HT2400	5620462001	Screw	2
41	HT2400	5620340003	Hexagon Socket Screw	1
42	HT2400	5650020004	Spring Washer	1
43	HT2400	5650213001	Washer	1
44	HT2400	3700227001	Washer	1
45	HT2400	5650494001	Washer	2
46	HT2400	3552305001	Eccentric Block	1
47	HT2400	2823732001	L R Housing Set	1
48	HT2400	2823733001	Side Handle	1
49	HT2400	5650493001	Bush	2
201	HT2400	2820247001	Blade Set	1
202	HT2400	2823057001	Guard And Screw Set	1
203	HT2400	2790350002	Motor And Gear ASSY	1
204	HT2400	2823642003	PCB Assembly	1
401	HT2400	2823715001	Nut And Washer Set	1